


Polymer Concrete Enclosure Installation Instructions

Notice: All installation activities should be done in accordance with all local, state, and federal Occupational Safety and Health requirements and any other applicable laws or standards.




STEP 1

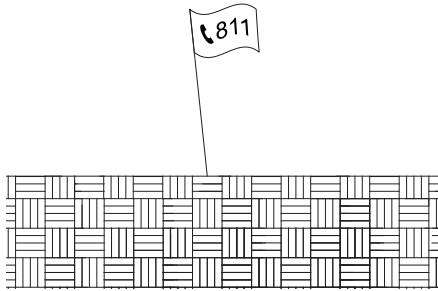


Before beginning installation, be sure to check for existing utilities in ground and make sure not to disturb or damage them.

STEP 2

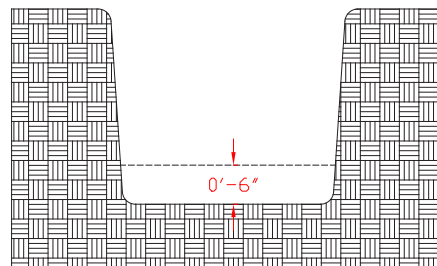


Excavate an area slightly larger than the outside dimensions of the enclosure and 6 inches deeper to allow for a gravel base.

STEP 3

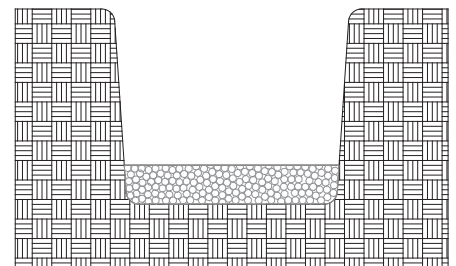


Add and level approximately 6" of gravel to the bottom of the hole.

STEP 4

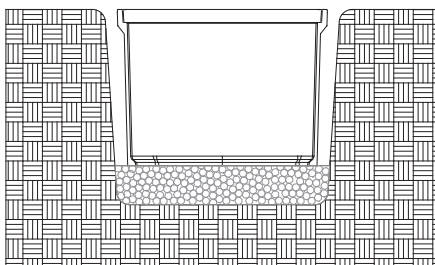


Carefully lower the enclosure into the hole and level the top with grade.

STEP 5

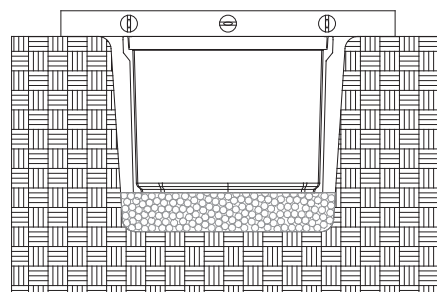

Fill the hole on the outside of the enclosure and compact as required.

STEP 6

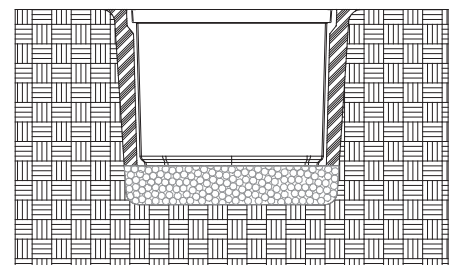

Make any final adjustments necessary to ensure the top of the enclosure is level with grade.



8873 Western Way, Jacksonville, FL 32256

904.400.7100 | Fax 904.358.1702 | GlasMasters.com